



# LockNLoad<sup>™</sup> Gutter Mount Kit


GUTTER MOUNT HEAVY DUTY ROOF RACK

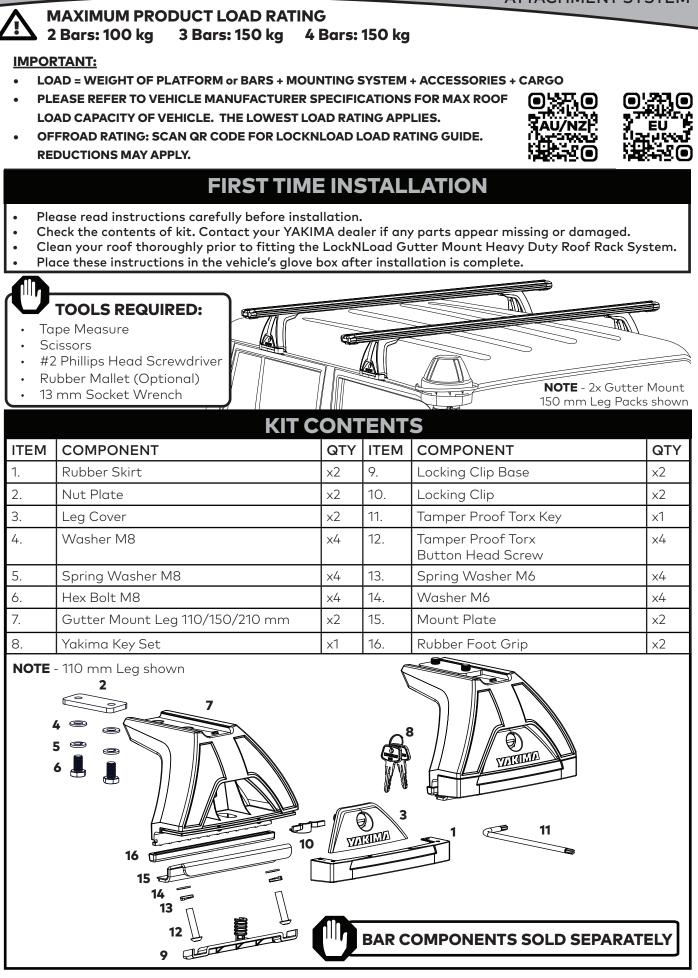



#### **INSTALLATION TO LOCKNLOAD CROSSBARS - SEE PAGES 2 - 6**


#### LOCKNLOAD PLATFORM INSTALLATION TO GUTTER MOUNT LEGS - SEE PAGES 6 - 9

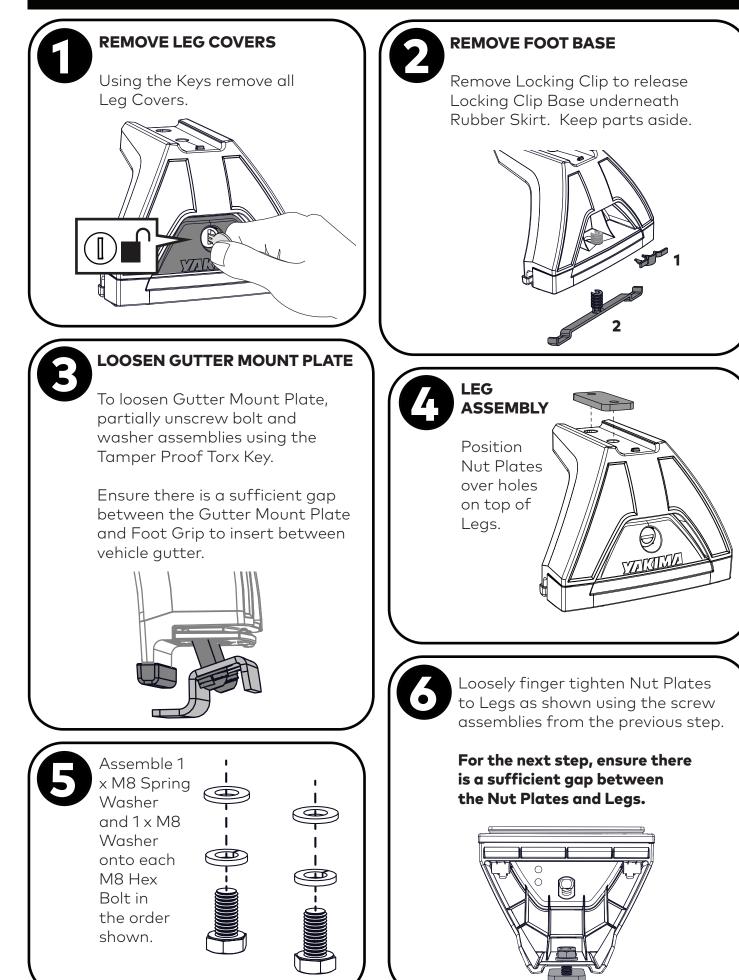


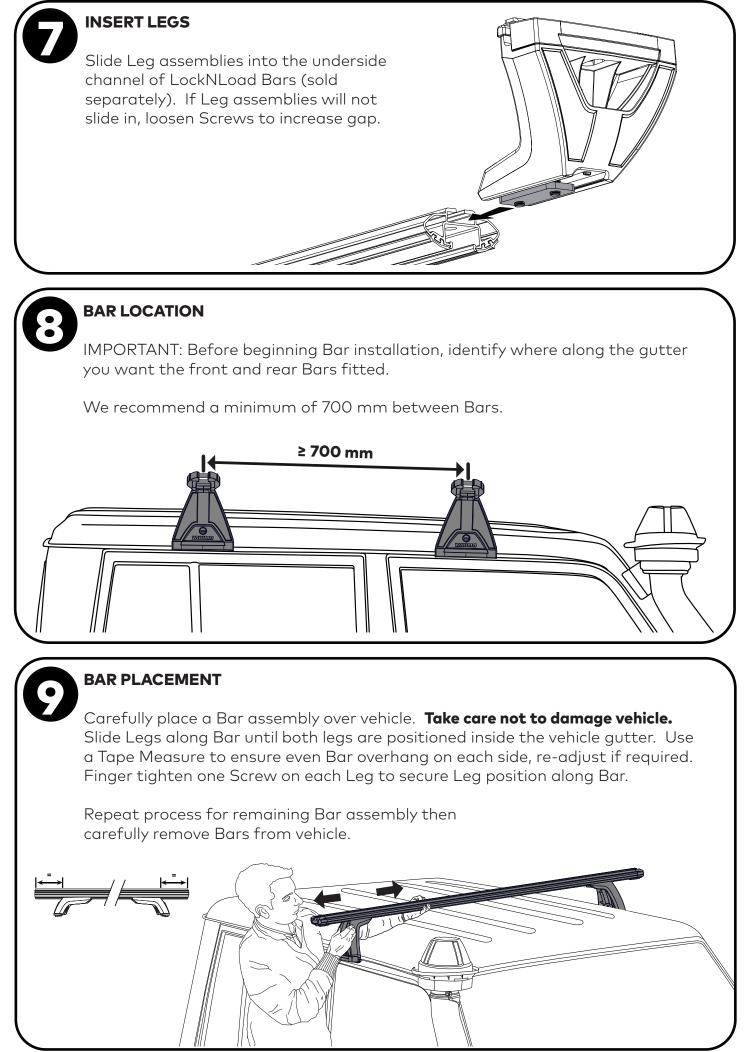

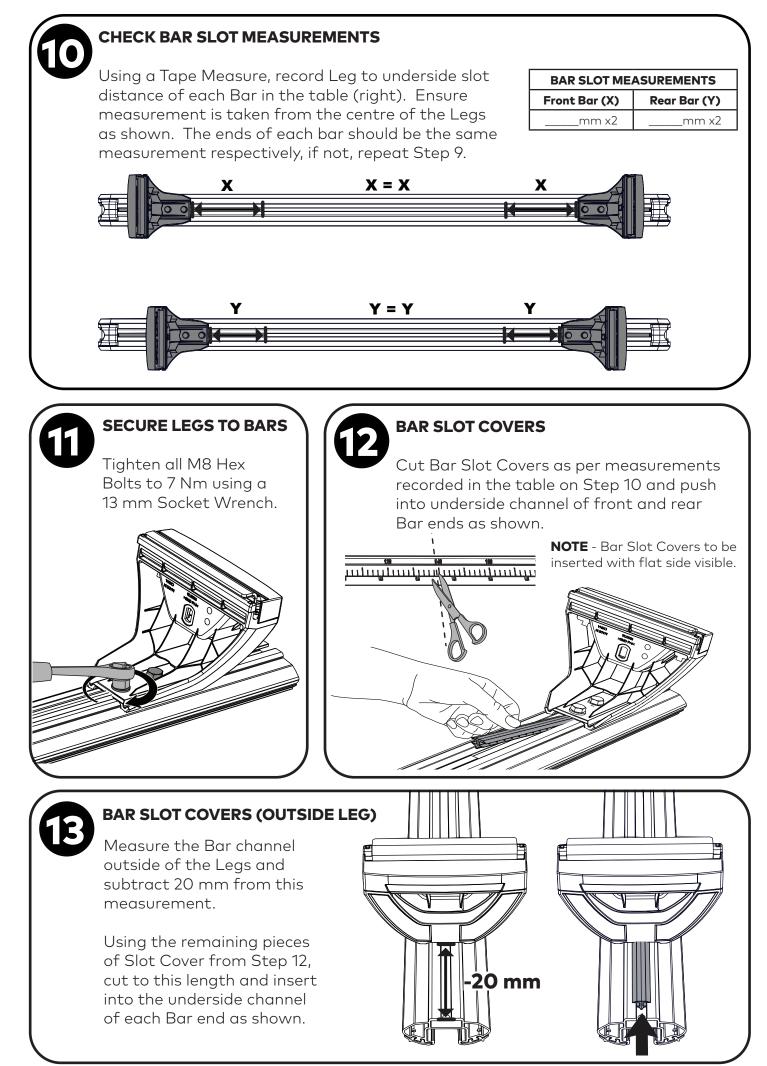

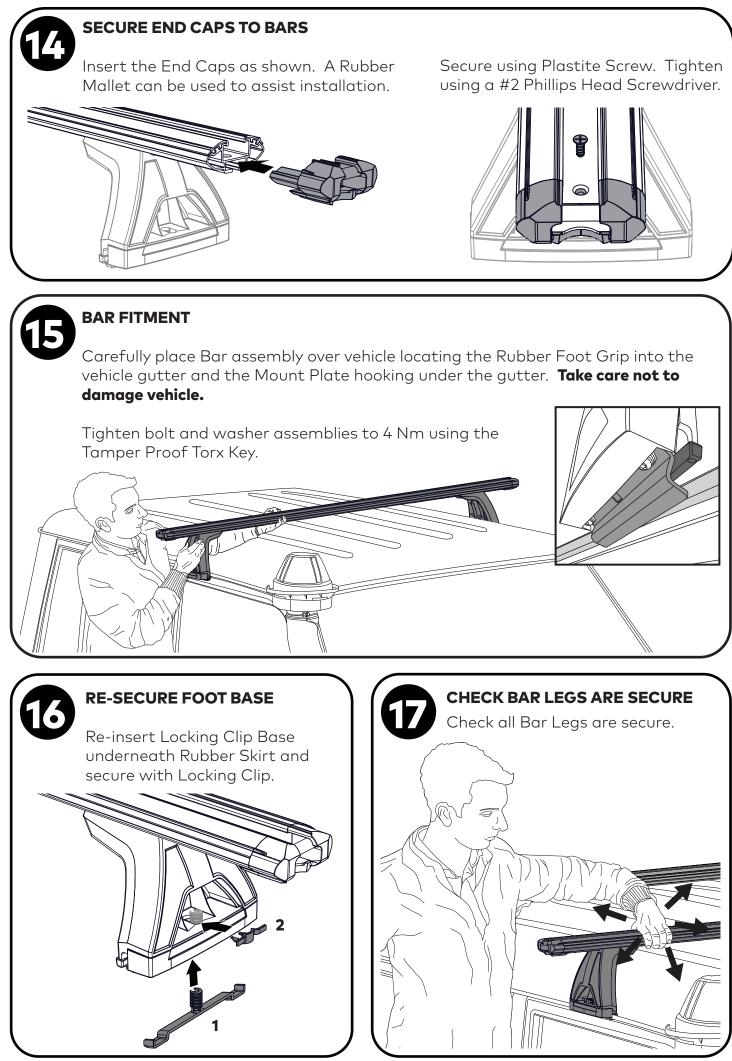

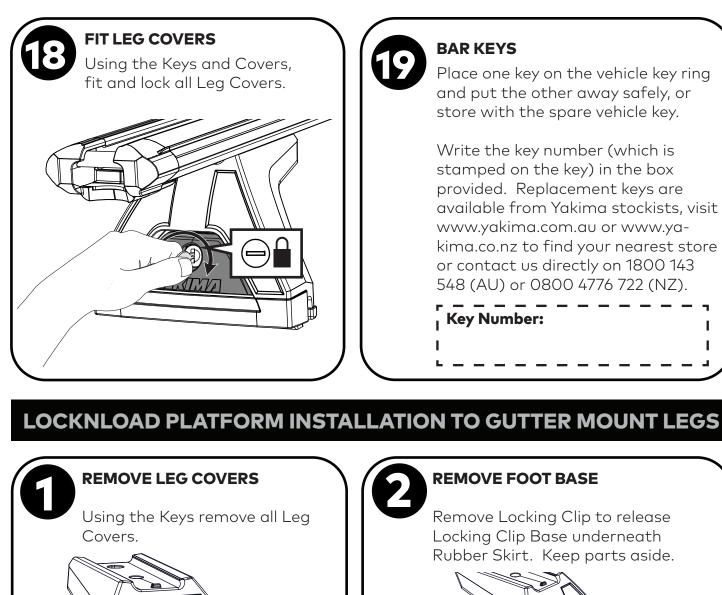


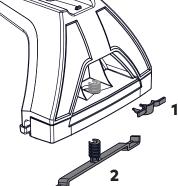

## LOOSEN GUTTER MOUNT PLATE


To loosen Gutter Mount Plate, partially unscrew bolt and washer assemblies using the Tamper Proof Torx Key.

Ensure there is a sufficient gap between the Gutter Mount Plate and Foot Grip to insert between vehicle gutter.

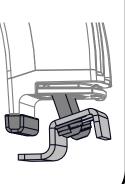



 
Assemble 1 x M8 Spring Washer and 1 x M8 Washer onto each M8 Hex Bolt in the order shown.



### ASSEMBLE LEGS

Assemble each Leg as shown using 1 x Leg Mounting Bracket (from **Platform** Kit), 1 x Nut Plate and the two screw assemblies from the previous step.

Tighten all M8 Hex Bolts to 7 Nm using a 13 mm Socket Wrench or Spanner.

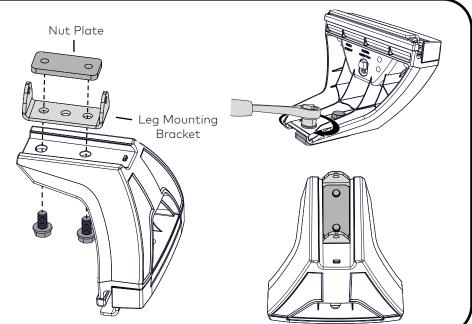




## INSTALL MOUNTING BLOCKS

Place a Mounting Block (from **Platform** Kit) on top of each Leg assembly, lining up the rivnut holes on Mounting Block with holes on tabs of Leg Mounting Bracket.

Secure with 2x M6 Capscrew 16 mm with Washer as shown (from **Platform** Kit).


Tighten all screws to 4 Nm with a 4 mm Ball End Allen Key or a suitable Torque Wrench.

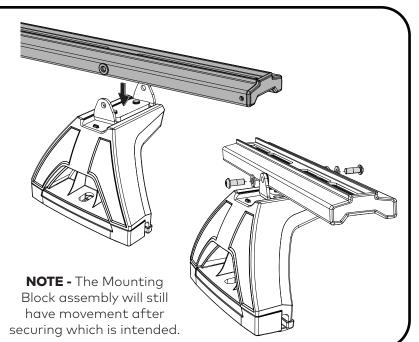

## LEG LOCATION

Place Legs into intended position in vehicle gutter, locating the Rubber Foot Grip into the vehicle gutter and the Mount Plate hooking under the gutter. **Take care not to damage vehicle.** 

We recommend spacing between 700 mm - 1000 mm apart.

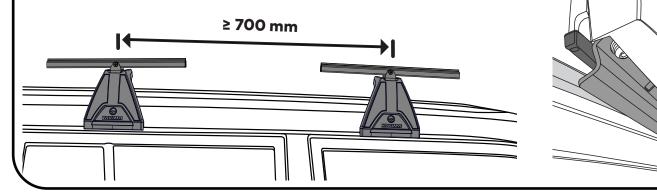

#### SECURE LEGS

Finger tighten bolt and washer assemblies to hold Legs in place.

Ensure Legs are square across the vehicle.


When all are aligned, use supplied Tamper Proof Torx Key to tighten into place to 4 Nm.

#### Take care not to damage vehicle.



# **RE-SECURE FOOT BASE**

Re-insert Locking Clip Base underneath Rubber Skirt and secure with Locking Clip.

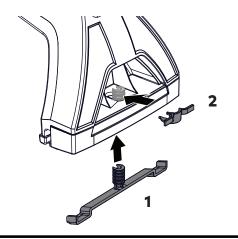






## LEG KEYS

Place one key on the vehicle key ring and put the other away safely, or store with the spare vehicle key.

Write the key number (which is stamped on the key) in the box provided. Replacement keys are available from Yakima stockists, visit www.yakima.com.au or www.yakima.co.nz to find your nearest store or contact us directly on 1800 143 548 (AU) or 0800 4776 722 (NZ).



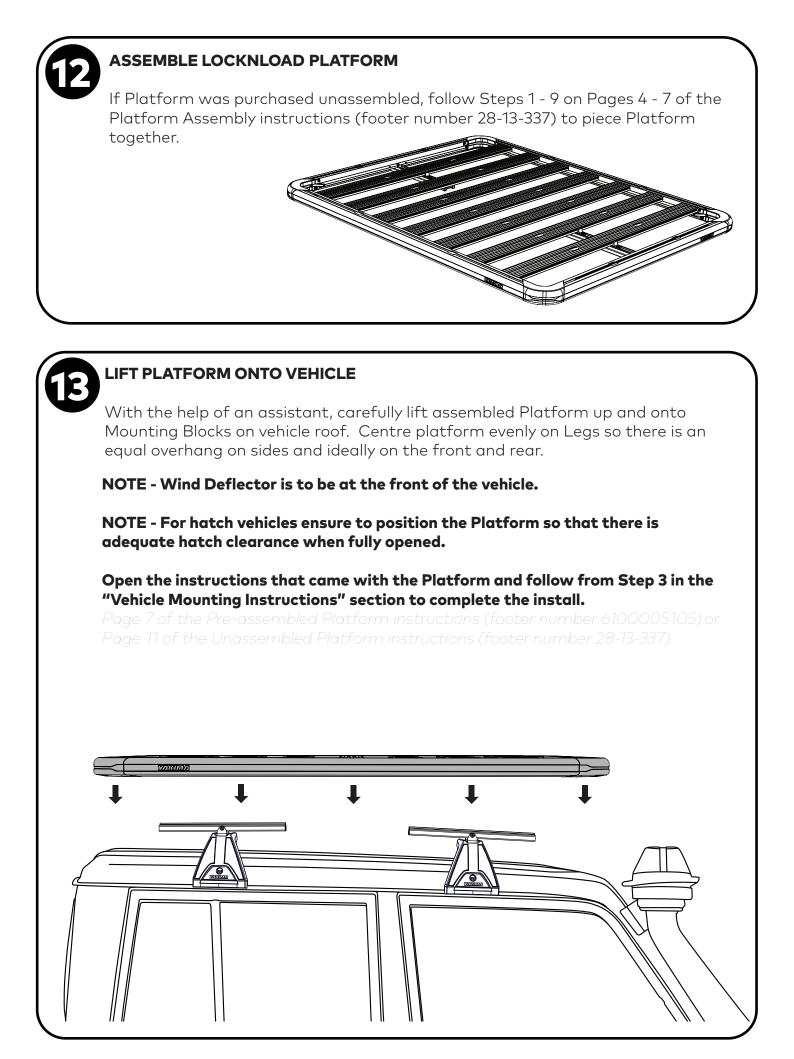



www.yakima.com.au www.yakima.co.nz www.yakima.com www.yakima.eu

#### YAKIMA AUSTRALIA PTY LTD

17 Hinkler Court Brendale, QLD 4500 Australia 1800 143 548

#### YAKIMA PRODUCTS, INC.

4101 Kruse Way Lake Oswego, OR 97035-2541 USA 888 925 4621

ALL CONTENT SUBJECT TO YAKIMA AUSTRALIA PTY LTD COPYRIGHT © 2018